


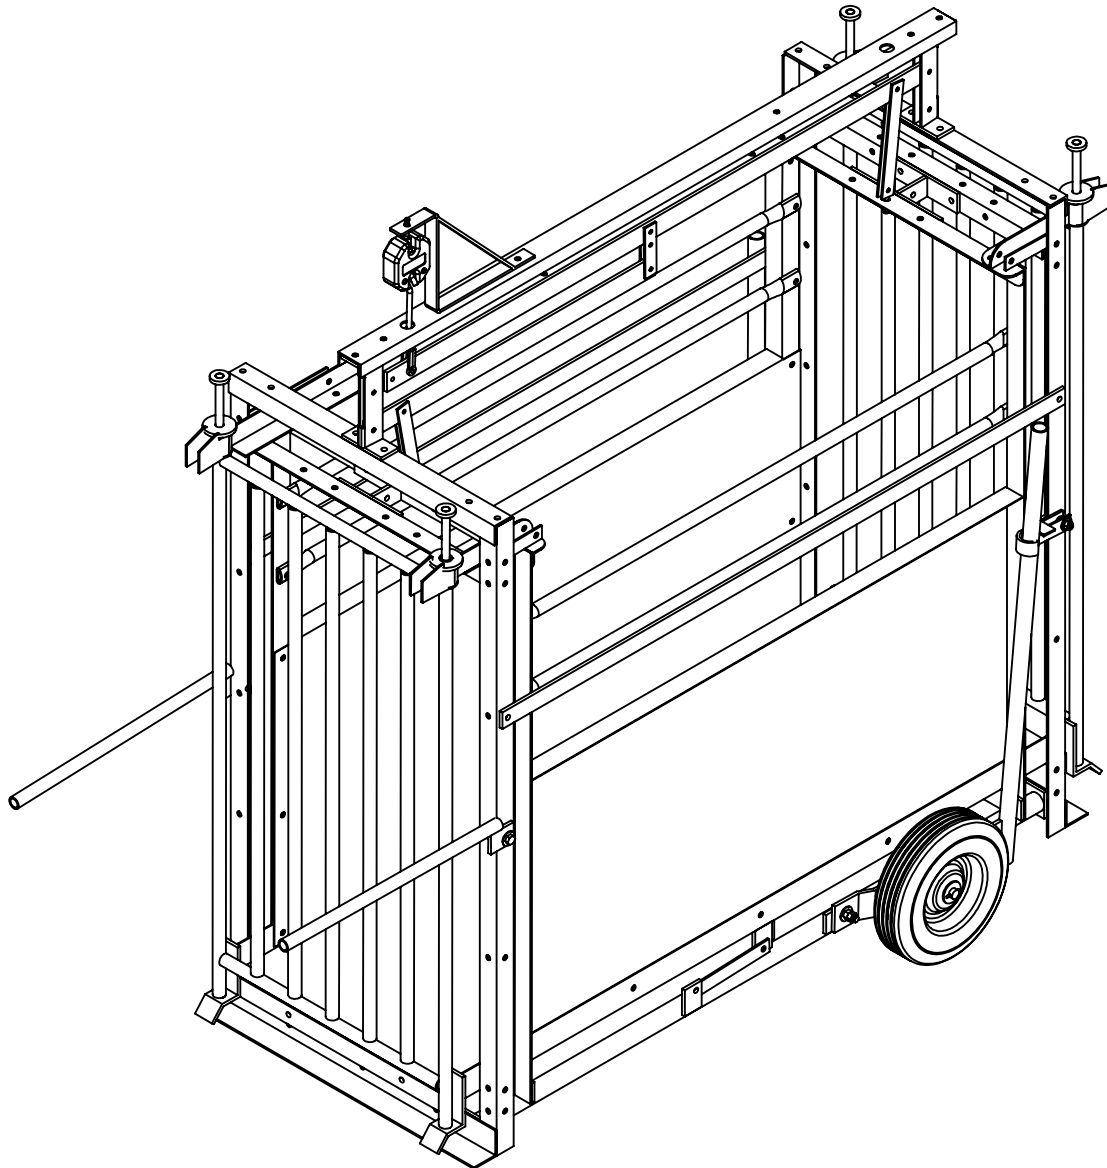


ACCU-ARM[®] PORTABLE SCALE WHEEL KIT ASSEMBLY FS-WK0000



ACCU-ARM[®] PORTABLE SCALE

WHEEL KIT ASSEMBLY

EXPLODED VIEW

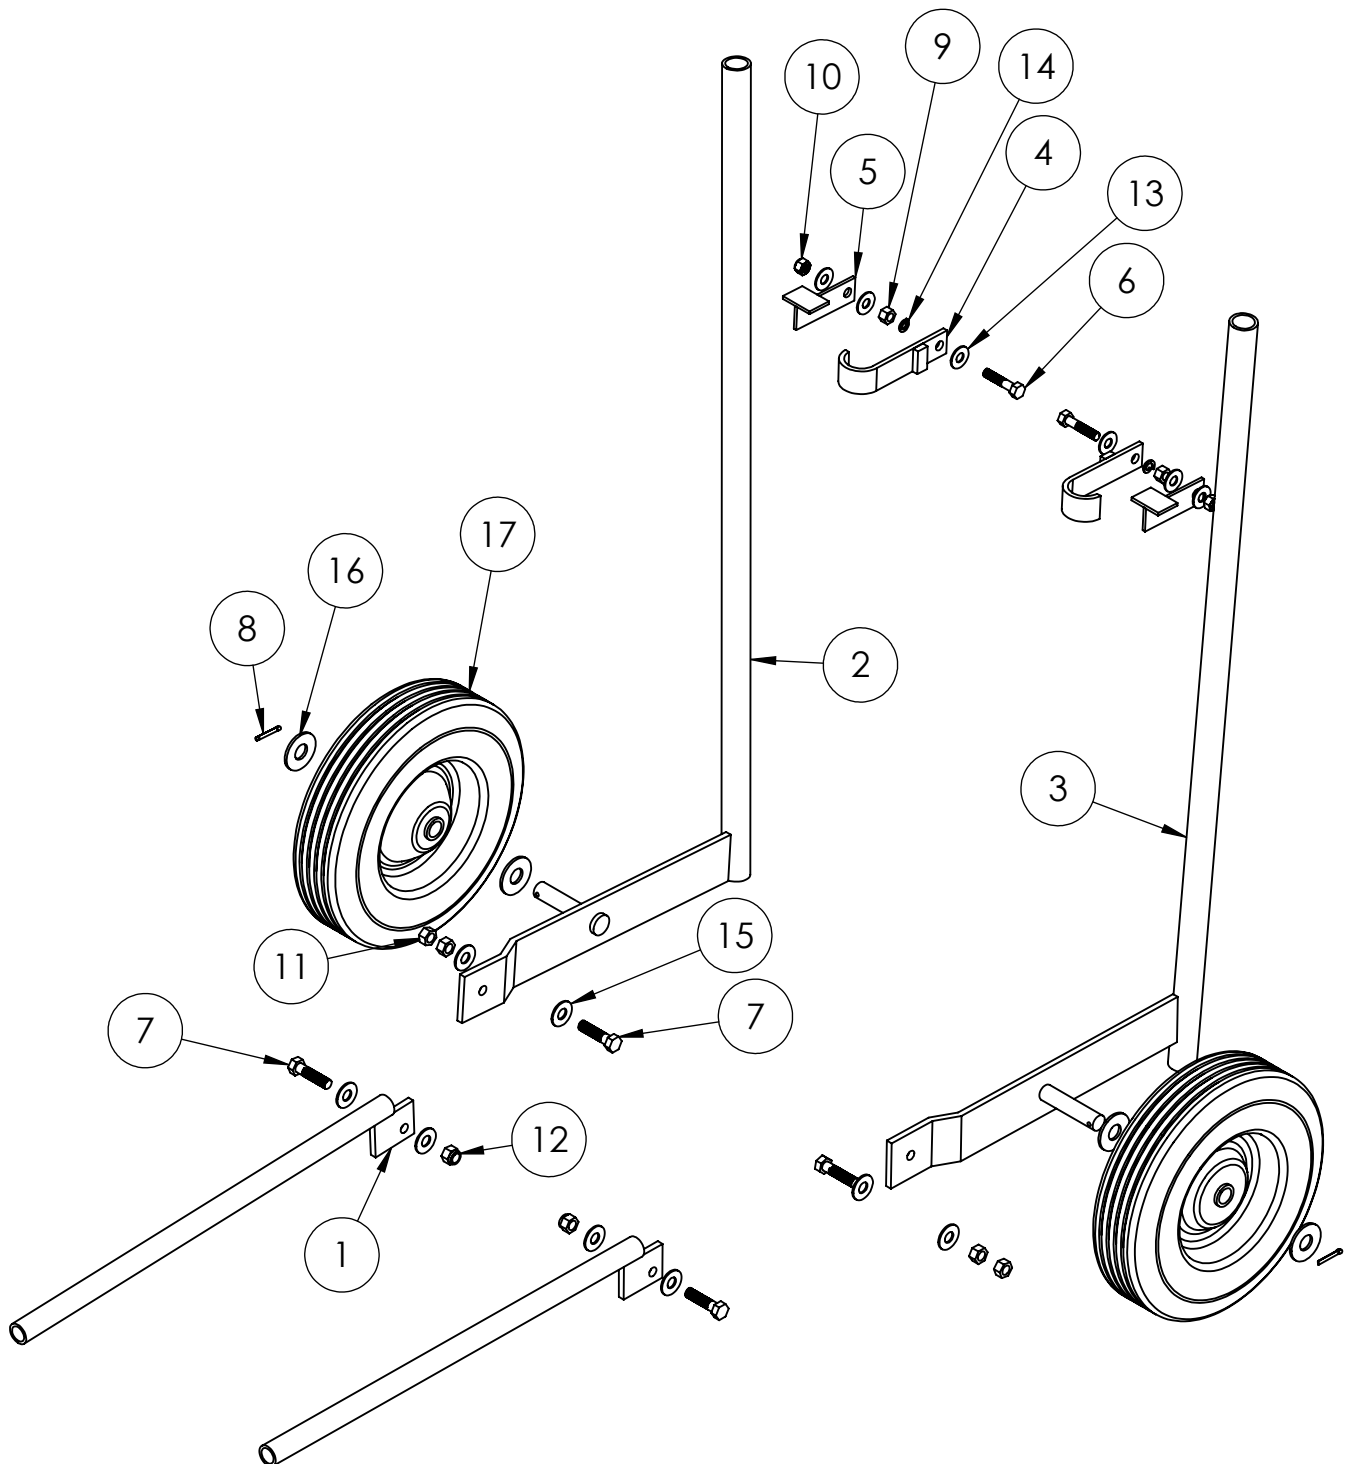

ACCU-ARM[®] PORTABLE SCALE WHEEL KIT ASSEMBLY BOM

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	KS-WK0001	HANDLE SCALE RIGHT/LEFT	2
2	KS-WK0002	AXLE SCALE RIGHT ASSEMBLY	1
3	KS-WK0003	AXLE SCALE LEFT ASSEMBLY	1
4	KS-WK0004	AXLE SCALE LATCH BRKT	2
5	KS-WK0006	WK LOCKING TAB	2
6	RFB-2150	HHCS 5/16 X 1-1/2 ZP	2
7	RFB-3200	HHCS 3/8" X 1 1/2" LONG ZP	4
8	RFM-3235	COTTER PIN 5/32X1 ZP	2
9	RFN-2100	NUT 5/16 HEX ZP	2
10	RFN-2400	NUT 5/16 HEX LOC NYLON ZP	2
11	RFN-3100	3/8" HEX NUT ZP	4
12	RFN-3700	NUT 3/8 HEX LOC NYLON INSERT ZP	2
13	RFW-2000	WASHER 5/16 FLAT ZP	6
14	RFW-2300	WASHER 5/16 SPRING LOCK ZP	2
15	RFW-3100	WASHER 3/8 FLAT ZP	8
16	RFW-5600	9/16" FLAT WASHER	4
17	RXC-1000	WHEELS SCALE 2.75X10	2


ACCU-ARM[®] PORTABLE SCALE

WHEEL KIT ASSEMBLY

STEP 1

Attach Wheels to Axles.

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	KS-WK0003	AXLE SCALE LEFT ASSEMBLY	1
2	KS-WK0002	AXLE SCALE RIGHT ASSEMBLY	1
3	RXC-1000	WHEELS SCALE 2.75X10	2
4	RFM-3235	COTTER PIN 5/32X1 ZP	2
5	RFW-5600	9/16" FLAT WASHER	4

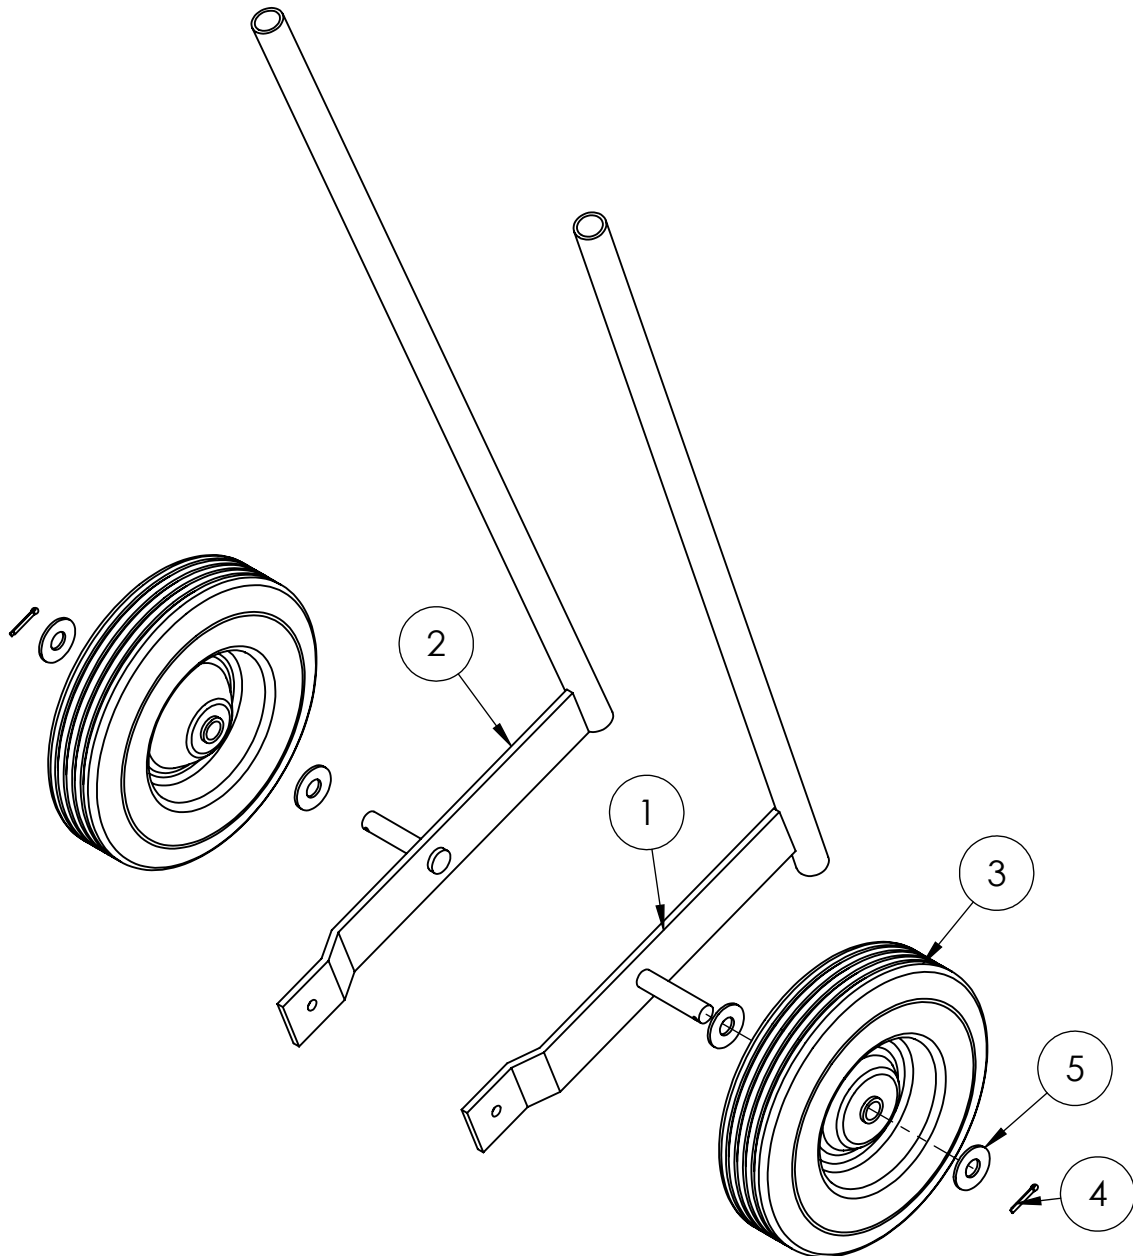

ACCU-ARM[®] PORTABLE SCALE


WHEEL KIT ASSEMBLY

STEP 2

Attach Right & Left Wheel Assemblies to tab on bottom of scale as shown.

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	RFB-3200	HHCS 3/8" X 1 1/2" LONG ZP	2
2	RFW-3100	WASHER 3/8 FLAT ZP	4
3	RFN-3100	3/8" HEX NUT ZP	4
33	KS-PS0018		1
34	FS-00C100		1

Axle assembly should pivot freely without twisting.

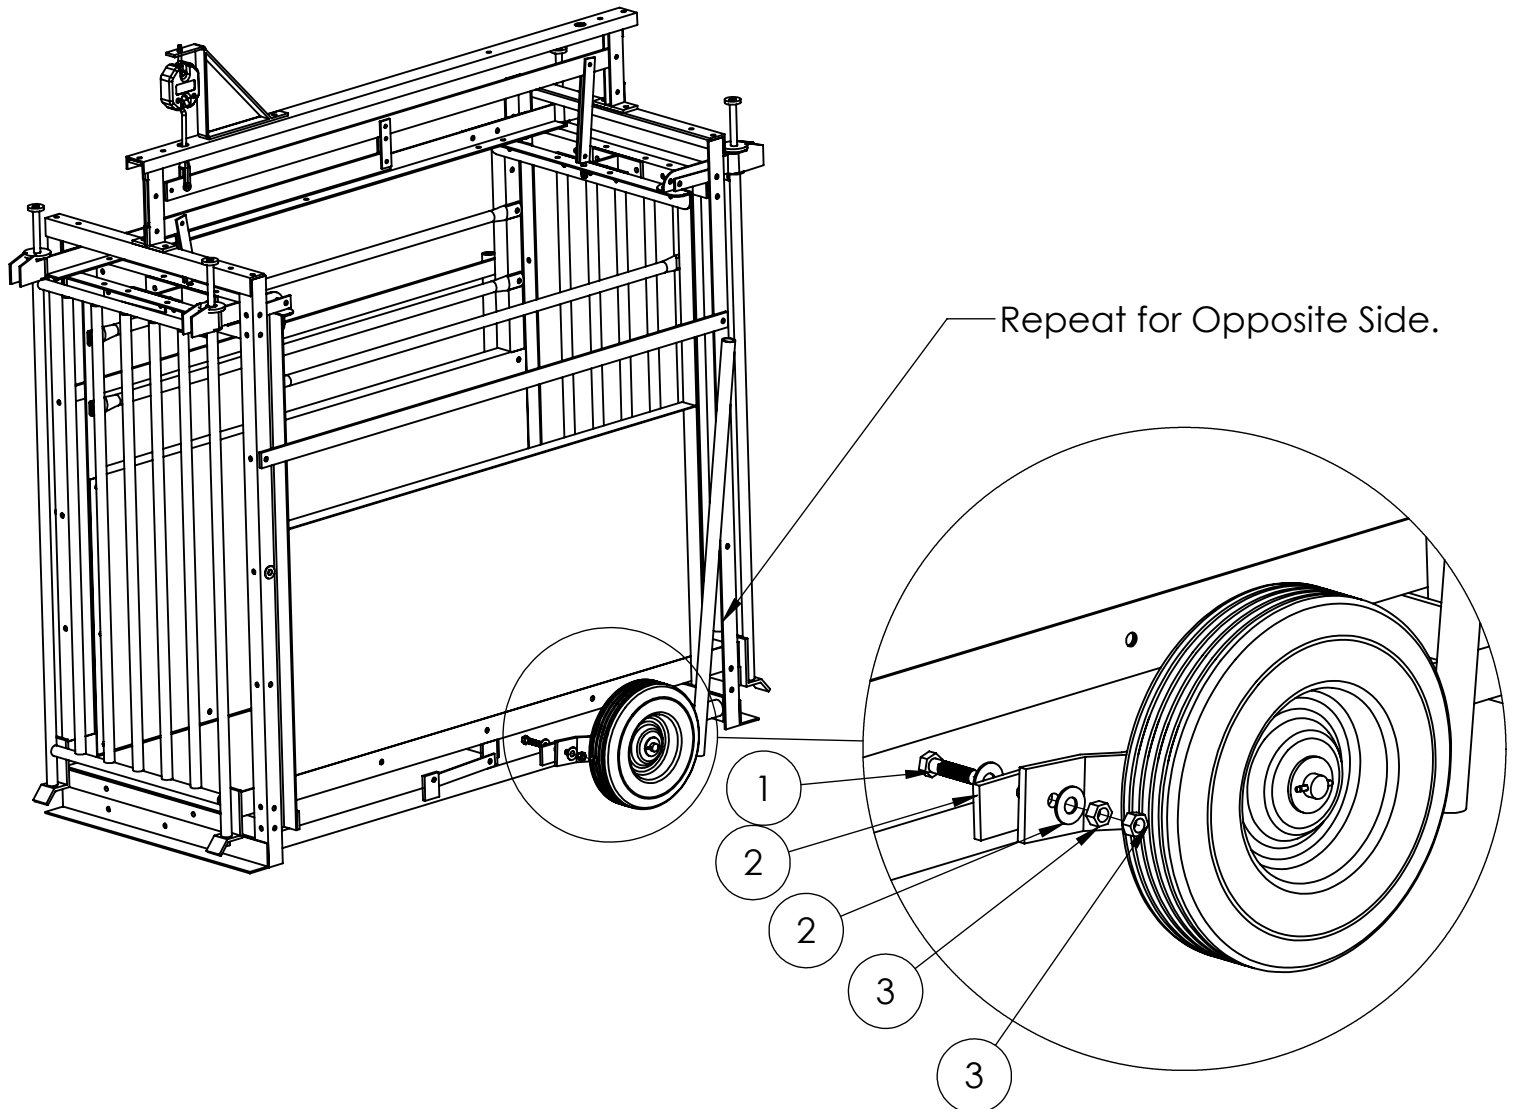


ACCU-ARM® PORTABLE SCALE

WHEEL KIT ASSEMBLY

STEP 3

Fasten Axle Latch Bracket and Locking Tab in center hole of frame end on same side as wheels.

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	KS-WK0006	WK LOCKING TAB	2
2	KS-WK0004	AXLE SCALE LATCH BRKT	2
3	RFB-2150	HHCS 5/16 X 1-1/2 ZP	2
4	RFW-2000	WASHER 5/16 FLAT ZP	6
5	RFW-2300	WASHER 5/16 SPRING LOCK ZP	2
6	RFN-2100	NUT 5/16 HEX ZP	2
7	RFN-2400	NUT 5/16 HEX LOC NYLON ZP	2
40	KS-PS0018		1
41	FS-00C100		1
42	KS-WK0001	HANDLE SCALE RIGHT/LEFT	2
43	RFN-3700	NUT 3/8 HEX LOC NYLON INSERT ZP	2

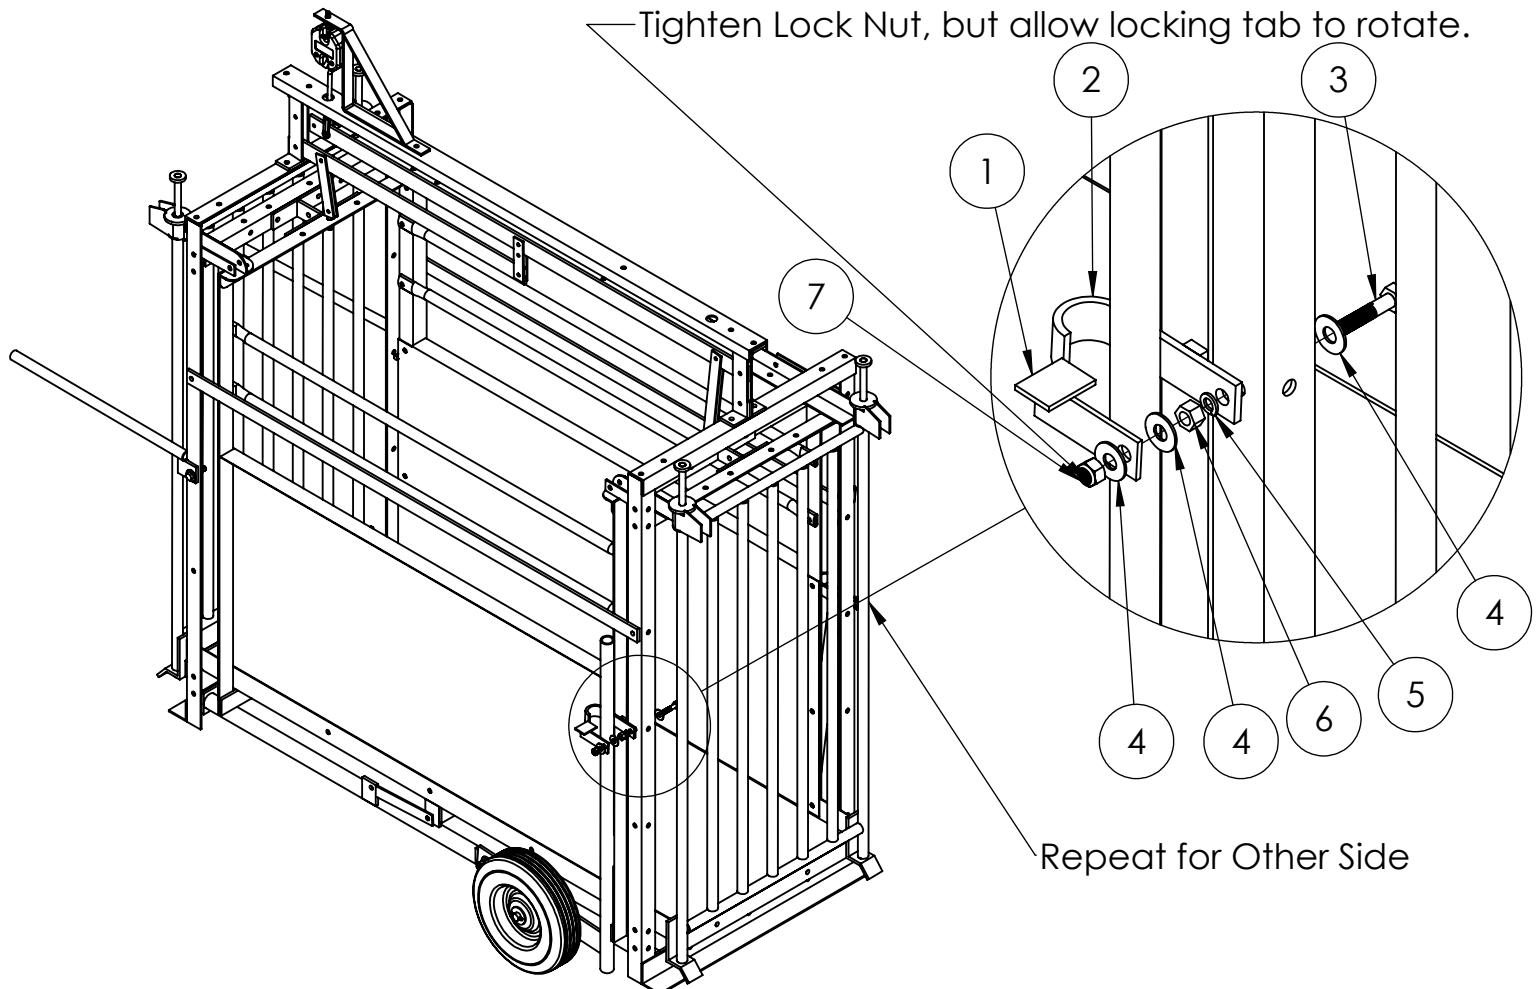


ACCU-ARM[®] PORTABLE SCALE

WHEEL KIT ASSEMBLY

STEP 4

Attach Pipe Handles to center hole of end frame on opposite side of wheels.

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	KS-WK0001	HANDLE SCALE RIGHT/LEFT	2
2	RFB-3200	HHCS 3/8" X 1 1/2" LONG ZP	4
3	RFN-3700	NUT 3/8 HEX LOC NYLON INSERT ZP	2
4	RFW-3100	WASHER 3/8 FLAT ZP	4
42	KS-PS0018		1
43	FS-00C100		1

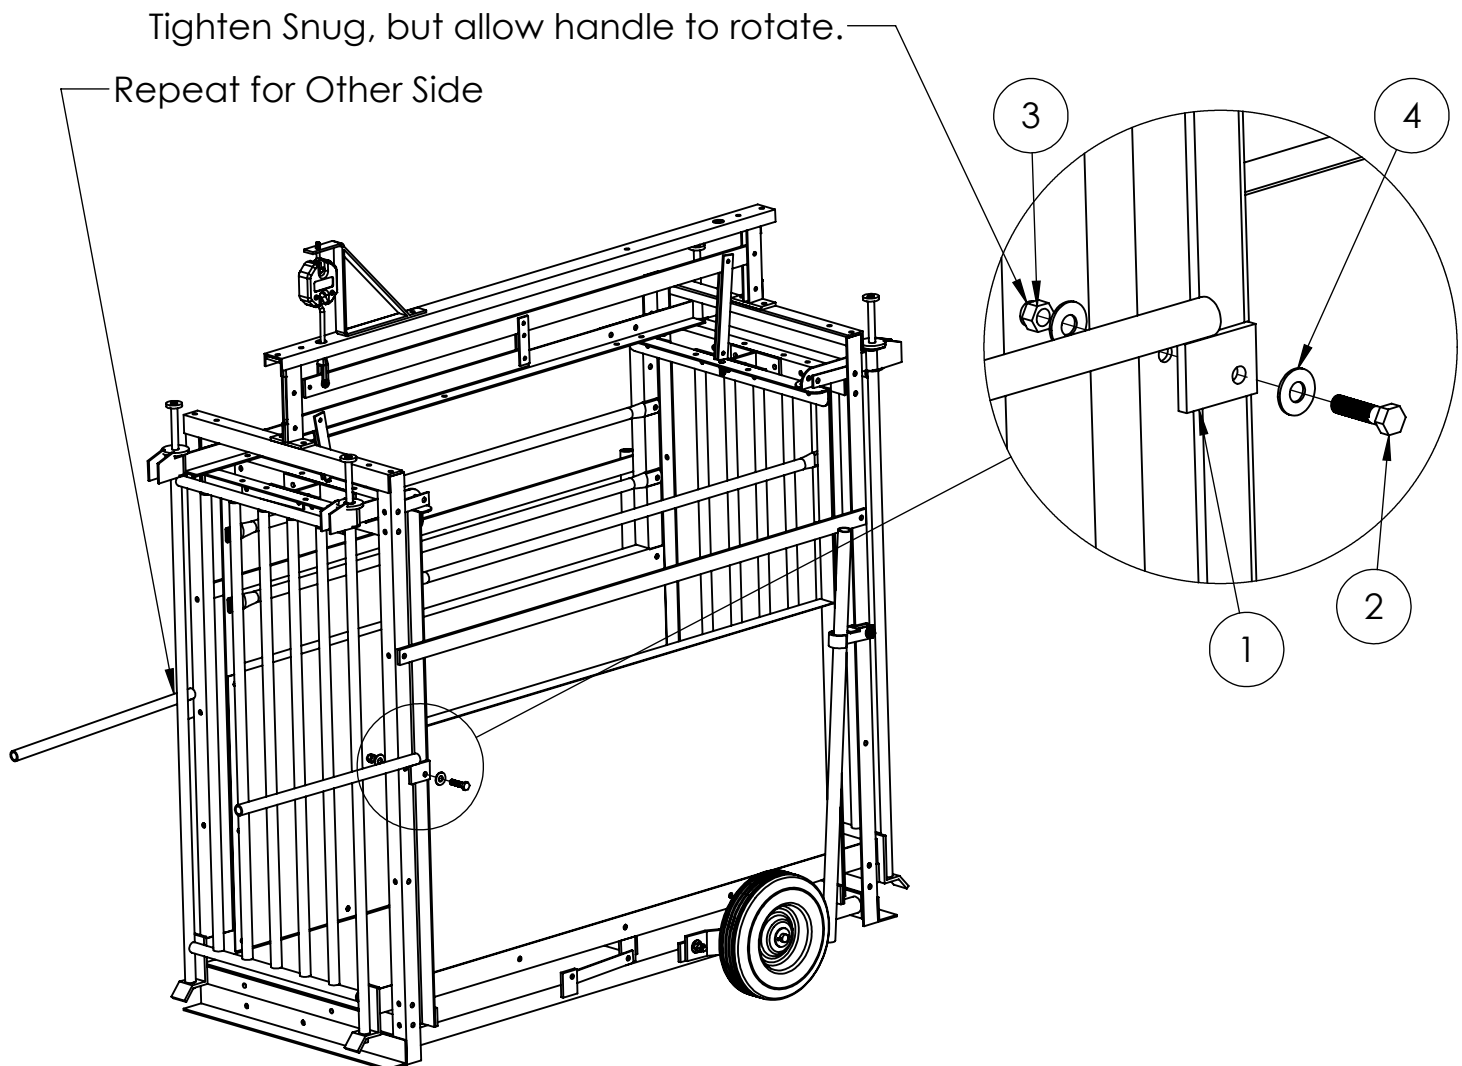


ACCU-ARM[®] PORTABLE SCALE

WHEEL KIT ASSEMBLY

STEP 5

To Raise Scale onto Wheels, Pull Back on Axle Handle
& Insert into Curved Latch Bracket.

Lift Opposite End of Scale With Pipe Handles to Move Scale.

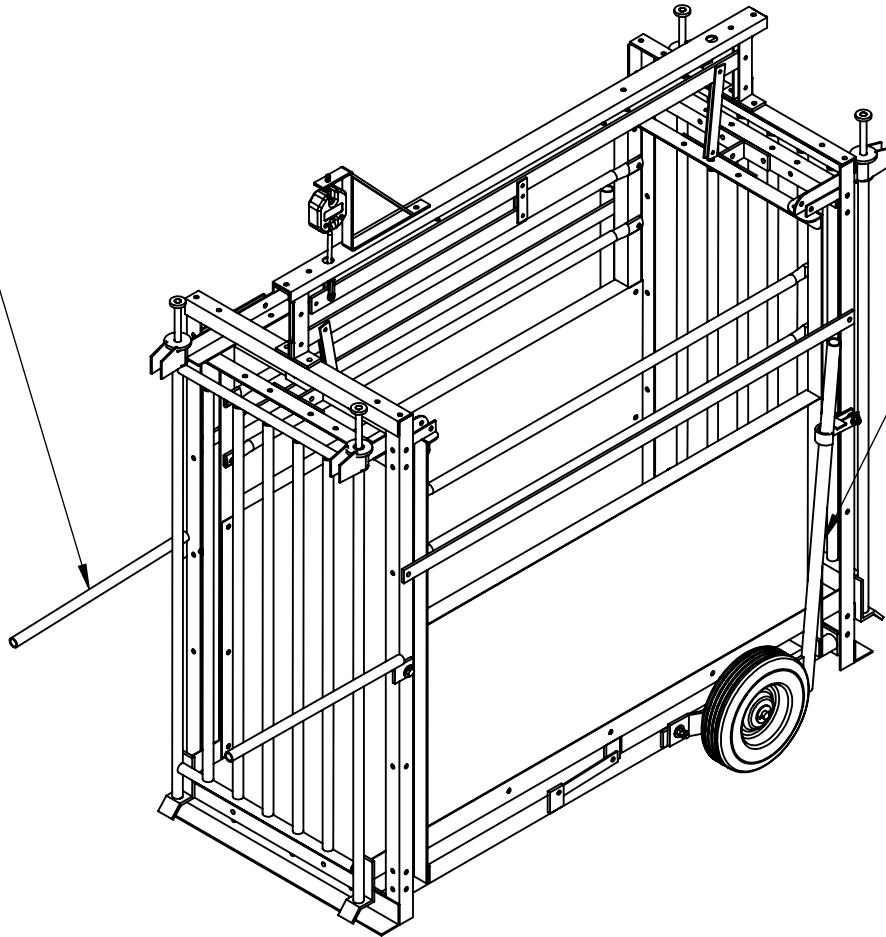

NOTES: Always lower scale to the floor by disengaging wheels before attempting to weigh animals.



120 N. Industrial Ave., PO Box 338, Osborne, KS 67473, USA
1-800-255-0316 • 1-785-346-2192
sales@osborne-ind.com
www.osbornelivestockequipment.com