

FENCELINE ADAPTER

Assembly Instructions

RN3 & RN4 SERIES

Part Numbers: FF-00RN3A, FF-RN4A, RR-0RN3AS, FF-0RN4AS, FF-00RN3AG

UNPACKING

Upon receiving your shipment, check the cartons for in transit handling damage. ALERT THE DELIVERING CARRIER IMMEDIATELY if damage is discovered. Continue unpacking only after the carrier has acknowledged the damage and potential loss of contents.


NOTICE

All loss or damage in transit is the responsibility of the delivering carrier, NOT OSBORNE INDUSTRIES. To protect your rights in the event of damage or loss, **sign the delivery waybill only after the carrier has acknowledged in writing that damage or loss has occurred.** In the event that damage is revealed only after unpacking is complete, notify the delivering carrier immediately and request an inspection of the damaged merchandise before proceeding.

Locate the Inspection List and retain this with the waybill. Identify all parts with the Parts List as they are unpacked and compare with the Inspection List. Once all parts have been identified, inspected for freight damage, and counted, proceed to assembly.




- A. One (1) fenceline adapter frame
- B. Bolt Kit

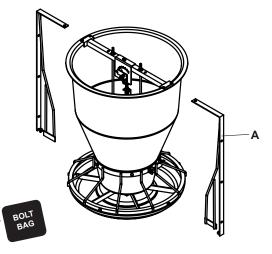


ASSEMBLY INSTRUCTIONS


 Ensure the feeder crossbar is aligned above one of the trough divider bars. If the crossbar is not positioned appropriately, remove and relocate to the position outlined below.

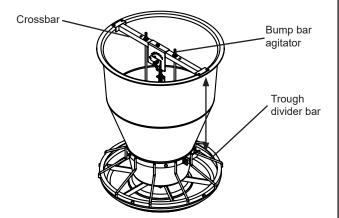

Attach the fenceline adapter to the trough divider bar aligned below the crossbar. Do this by twisting the U-shaped horseshoe around the base of the divider bar. See the diagram below.

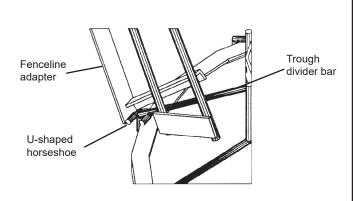

Secure the fenceline adapter by gently pushing to top of the fenceline adapter toward the center of the feeder. Align the hole in the top of the fenceline adapter with the hole provided in the crossbar.

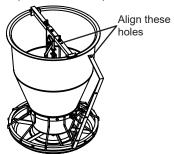

NOTE: Some older feeders may not have a hole provided in the crossbar for mounting fenceline adapters. Ensure the adapter is square and plumb and drill a 3/8-in. diameter hole into the crossbar using the adapter as a guide.

 Attach the top of the fenceline adapter to the crossbar using the 5/16 x 7/8-in. bolt and 5/16-in. flange nut provided. Repeat these steps for the other fenceline adapter.



Place the feeder in the fenceline between two properly spaced posts or other immobile objects. Attach the adapters to the fenceline using the holes provided.

DO NOT: Fasten fence panels directly to the feeder.

DO NOT: Use the feeder as a support or anchor for other objects.

DO NOT: Allow feeder to run empty. Empty feeders without floor anchors may become light enough pigs could cause damage to feeder.

PARTS LIST		
Included in this shipment is one style of Fenceline Adapter and one style of bolt kit.		
Painted Steel Fenceline Adapter Parts List		
Part No.	Description	Qty.
FF-00RN3A	RN3 fenceline adapter	1
FF-00RN4A	RN4 fenceline adapter	1
Stainless Steel Fenceline Adapter Parts List		
FF-0RN3AS	RN3 fenceline adapter	1
FF-0RN4AS	RN4 fenceline adapter	1
Galvanized Steel Fenceline Adapter Parts List		
FF-00RN3AG	RN3 fenceline adapter	1
Standard Fenceline Adapter Fasteners (Models RN3 & RN4)		
KF-N3A002	Bolt Kit - Includes fasteners below.	1
RFB-2050	5/16 x 7/8-in. bolt	1
RFN-2300	5/16-in. flange wiz nut	1
Stainless Steel Fenceline Adapter Fasteners (Models RN3 & RN4)		
KF-N3AS02	SS Bolt Kit - Includes fasteners below.	1
RFB-2061	5/16 x 1-in. bolt, SS	1
RFN-2301	5/16-in. flange wiz nut, SS	1

