


FS-000FS4 Accu-Arm® Weigh Race for FIRE® Feeder

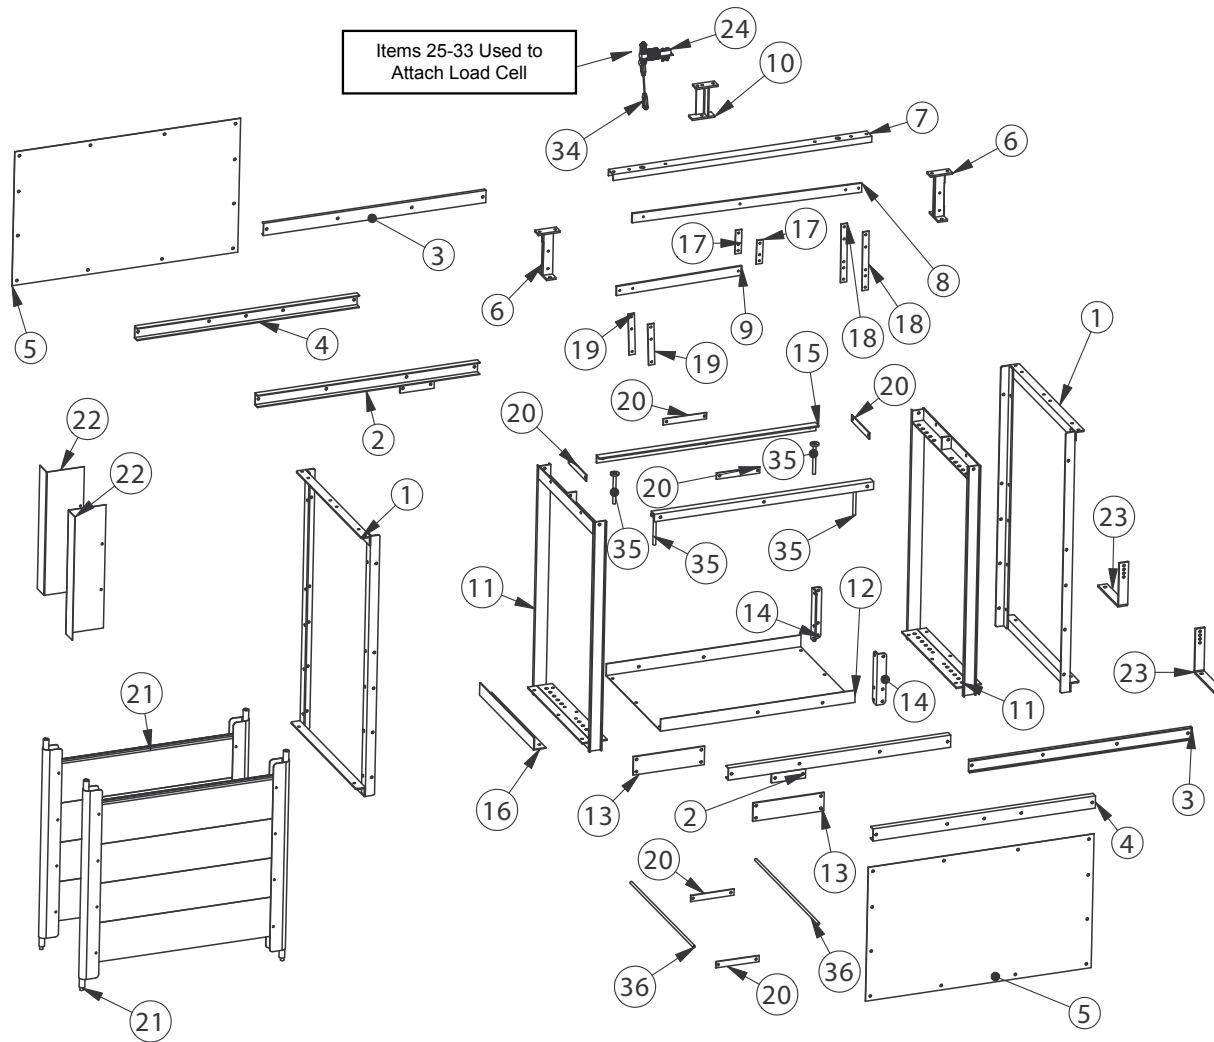

| Item No. | Part Number | Description | Qty. |
|----------|-------------|--|------|
| 1 | KS-FSC300 | FIRE Scale End | 2 |
| 2 | KS-FSC170 | FIRE Scale Side Channel | 2 |
| 3 | KS-FSC320 | FIRE Scale Side Upper Channel | 2 |
| 4 | KS-FSC330 | FIRE Scale Side Middle Channel | 2 |
| 5 | KS-FSC340 | FIRE Scale Side | 2 |
| 6 | KS-PSG202 | End Assembly, ZP | 2 |
| 7 | KS-FSC130 | FIRE Scale Top Channel | 1 |
| 8 | KS-FSC140 | FIRE Scale Long Arm | 1 |
| 9 | KS-FSC150 | FIRE Scale Short Arm | 1 |
| 10 | KS-FSC181c | Load Cell Mount Scale | 1 |
| 11 | KS-FSC310 | FIRE Scale Basket End | 2 |
| 12 | KS-FSC350 | FIRE Scale Floor | 1 |
| 13 | KS-FSC380 | FIRE Scale Floor Sway Strap | 2 |
| 14 | KS-FSC450 | FIRE Scale Tilt Bracket | 2 |
| 15 | KS-FSC360 | FIRE Scale Basket Angle | 2 |
| 16 | KS-FSC370 | FIRE Scale Floor Bridge | 1 |
| 17 | KS-PS0010 | Short Basket Hanging Link | 2 |
| 18 | KS-PS0008 | Long Basket Hanging Link | 2 |
| 19 | KS-PS0009 | Medium Basket Hanging Link | 2 |
| 20 | KS-PS0012 | Sway Bar | 6 |
| 21 | KS-FSC410 | FIRE Scale Race Panel | 2 |
| 22 | KR-FRL410 | FIRE Scale Race Panel Extension | 2 |
| 23 | KS-FSC441 | Scale Tilt Anchor Bracket | 2 |
| 24 | KR-FDE230 | FIRE Load Cell | 1 |
| 25 | SR-FFD601 | Load Cell Isolation Pad | 1 |
| 26 | RFM-7423 | Shoulder Bushing 1/4" ID x 5/16" OD x 3/4" Long | 2 |
| 27 | RFB-1671 | HHCS 1/4" x 1-3/4" Long SS | 2 |
| 28 | RFB-2310 | Eyebolt 5/16" x 2-1/2" ZP | 1 |
| 29 | RFM-4410 | Comp Spring 0.785" OD x 1.4" Long ZP | 1 |
| 30 | RFN-1401 | Nut 1/4" Hex LOC Nylon Insert SS | 2 |
| 31 | RFN-2400 | Nut 5/16" Hex LOC Nylon ZP | 1 |
| 32 | RFW-1201 | Washer 1/4" Flat SS | 2 |
| 33 | RFW-3100 | Washer 3/8" Flat ZP | 2 |
| 34 | KS-SS0135 | Flexible Load Cell Connector | 1 |
| 35 | KR-FRL130 | FIRE Race Drop Pin | 4 |
| 36 | KS-FSC210 | FIRE Scale Floor Tie Rod | 2 |