

Motor Replacement Instructions

1. Disconnect power to the FIRE feeder.
2. Remove all feed from the hopper.
3. Remove the three black side panels using a 3/8" wrench.
4. Locate the splash guard (as shown in Figure 1) and remove it.
5. Turn the feed cup counter-clockwise. See Figure 2. This will cause the flighting to unscrew from the motor shaft. *NOTE: Do not remove the flighting from the feed hopper. Simply loosen it from the motor.*
6. Remove the four (4) bolts that attach the motor to the feeder. See Figure 3.
7. Remove the motor from the motor mount plate. See Figure 4.
8. Install the new motor onto the motor mount plate and reassemble.



Figure 1
Feeder
Splash
Guard



Figure 2
Feed
Cup

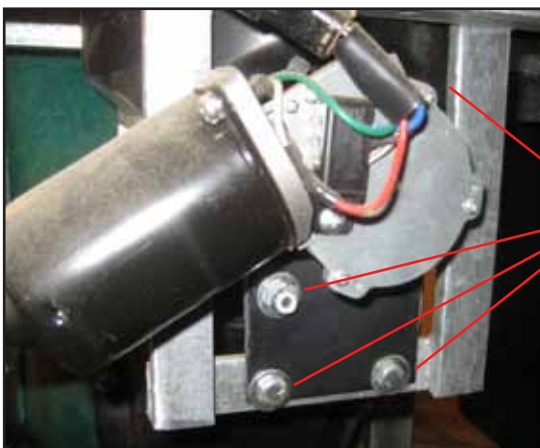


Figure 3
Four
bolts to
remove



Figure 4
Motor
Mount
Plate