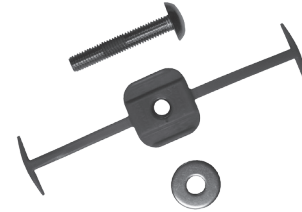


**Smart-Fasteners** make it easy to install Stanfield® Heat Pads or penning to plastic or metal slatted floors. Each Smart-Fastener consists of a stainless steel nut embedded inside corrosion-resistant plastic. Bolts and washers are also included. Smart-Fasteners require a 0.40 in. (10 mm) slot opening.

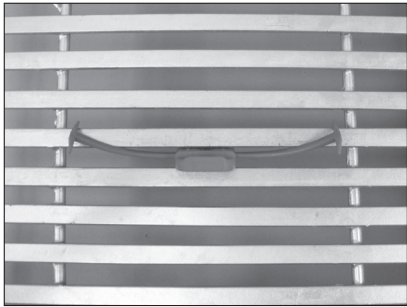
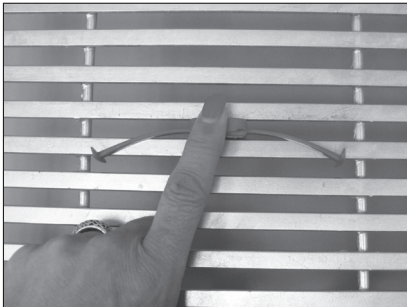
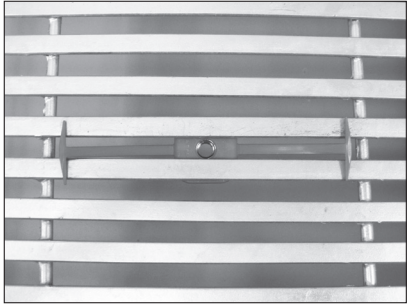
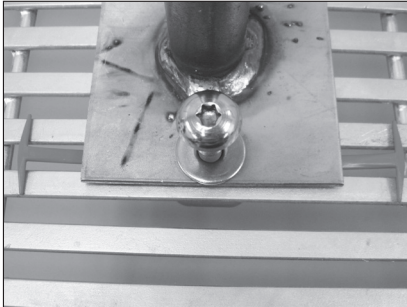
**For existing Stanfield Heat Pads**, the four pre-drilled holes in the outer perimeter of the heat pad must be enlarged. Use a 11/32" drill bit to enlarge the four existing holes. NOTE: Masonry-type drill bits are recommended for fiberglass because high speed steel bits can rapidly become dull.)

Once the pre-drilled holes have been enlarged, proceed to installation of the Smart-Fasteners.



| Item No. | Part No. | Part Name                         |
|----------|----------|-----------------------------------|
| 1.       | RFM-1080 | Smart-Fastener w/ bolt and washer |

### Installation Instructions:

|  |   |
|--|---|
| <p>1. Position the Smart-Fastener between the floor slots as shown below.</p>                | <p>2. Gently push the center of the Smart-Fastener under the slats. Ensure that the two T-shaped ends of the fastener remain above the flooring or the Smart-Fastener will fall into the pit.</p>  |
| <p>3. When installed properly, the Smart-Fastener should be positioned as shown below.</p>  | <p>4. Use a TORX® T-40 wrench or similar allen wrench to attach the included bolt and washer through the heat pad or penning to the flooring.</p>   |

NOTE: To remove the Smart-Fastener, simply cut one end of the T-shaped ends.