



36-in. Wind Diverter Kit

Installation Instructions

FV-WDK036

Osborne AGRI-AIDE Wind Diverters are packaged carefully and compactly to ensure their safe arrival at minimum cost. Each part was quality inspected prior to shipment and each carton was carefully packed to ensure that all necessary parts were present for the assembly.

UNPACKING

Upon receiving your shipment, check the cartons for in transit handling damage. ALERT THE DELIVERING CARRIER IMMEDIATELY if damage is discovered. Continue unpacking only after the carrier has acknowledged the damage and potential loss of contents.


NOTICE

All loss or damage in transit is the responsibility of the delivering carrier, NOT OSBORNE INDUSTRIES. To protect your rights in the event of damage or loss, **sign the delivery waybill only after the carrier has acknowledged in writing that damage or loss has occurred.** In the event that damage is revealed only after unpacking is complete, notify the delivering carrier immediately and request an inspection of the damaged merchandise before proceeding.


The 36-in. Wind Diverter Kit (WDK) is designed to fit the AGRI-AIDE 36-in. Flushmount Fan (FV-M3611V). The hole locations on the wind diverter cone may need adjustment to fit fans of other manufacturers.

ASSEMBLY INSTRUCTIONS

1. Drill four (4) 1/4-in. holes and one 3/16-in. hole through the cone at the indented markings on the part as shown in Figure 1.

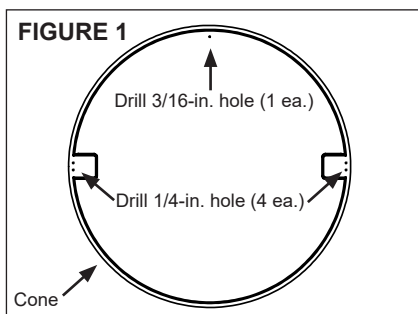


2. Attach the two (2) 2 x 17-in. aluminum brackets to the cone as shown in Figure 2. Follow the attachment diagram in Figure 3 using the four (4) 1/4-in. bolts, lock nuts, and washers provided. Tighten firmly, but do not overtighten.

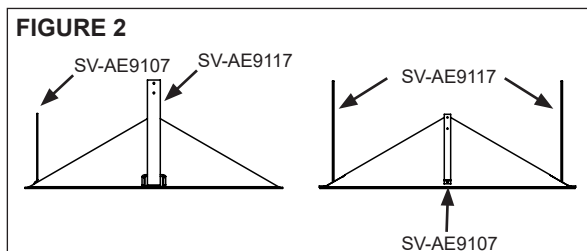

Parts List		
Part Number	Description	Qty
SV-AE9117	Fiberglass-reinforced cone	1
SV-AE9107	1 x 10-in. aluminum bracket	1
SV-AE9110	2 x 17-in. aluminum bracket	2
RFB-1401	1/4 x 1-in. bolt, SS	8
RFN-1401	1/4-in. hex lock nut, SS	8
RFW-1201	1/4-in. flat washer, SS	8
RFB-0841	10-32 x 3/4-in. bolt, SS	3
RFN-0801	10-32 hex lock nut, SS	3
RFW-0951	3/16 x 1 fender washer, SS	3

FIGURE 3

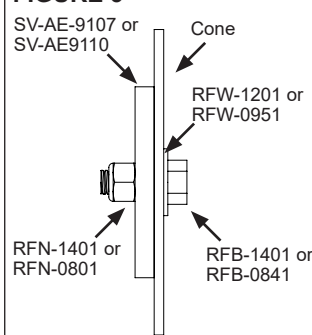


3. Attach the 1 x 10-in. aluminum bracket to the cone as shown in Figure 2. Follow the attachment diagram in Figure 3 using the 10-32 bolt, lock nut, and washer provided. Tighten firmly, but do not overtighten.

WARNING: DO NOT OVERTIGHTEN BOLTS AS DAMAGE TO THE FIBERGLASS CONE OR FAN HOUSING MAY OCCUR.

4. Align the assembled wind diverter on the fan housing with the correct spacing between the cone and housing as shown in Figure 4. Fasten the aluminum brackets to the fan housing with the bolts, nuts, and washers provided. Follow the attachment diagram in Figure 3. Tighten firmly, but do not overtighten.

FIGURE 4

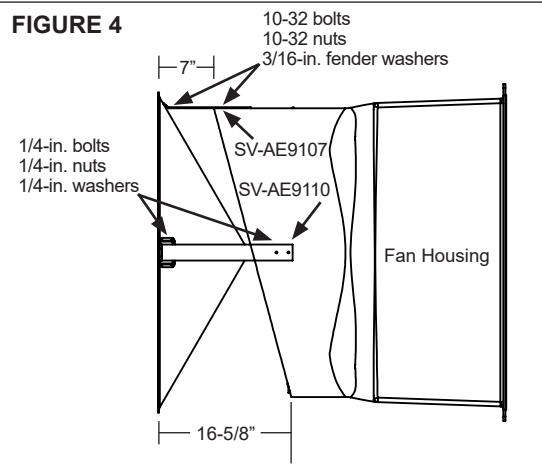

P.O. Box 388 • Osborne, KS 67473 U.S.A.
Phone: 1-800-255-0316 • Fax: 1-785-346-2194
sales@osborne-ind.com • www.osbornelivestockequipment.com