



Automatic Lamp & Mat Heating Control Installation



Table of Contents

Installation Overview	3
Mounting and Wiring	3
Conduit and Connections	3
Module Installation	4
Wiring/Setup	4
Wiring Multiple MPM100 Power Modulators into a System	5
Wiring MPM100 Power Modulator	6
Wiring Instructions	7
Specifications	8
Service	8

MicroZone is a trademark of HerdStar LLC.
Copyright © 2007 HerdStar LLC. All rights reserved.
Printed in the USA



1400 Madison Ave, Suite 504 Mankato, MN 56001
PH: 507-344-8005 FAX: 507-344-8009
www.herdstar.com

Installation Overview

This section covers the mounting and wiring of the MicroZone system. Anyone responsible for programming and operating the MicroZone should also read the **MicroZone Operations Manual**.

There are two symbols commonly used throughout this section:



This symbol means the text describes steps that involve going near terminals with potentially deadly voltage. Always shut off power to all MicroZone modules and all attached devices before opening the cover.



This symbol means the text has extra importance since it is describing the importance of a feature or explaining a step to which you should pay close attention to avoid problems.

Mounting and Wiring

Mount the MicroZone MC100 control module indoors where the temperature remains between 0 degrees Fahrenheit (- 17 degree Celsius) and 105 degrees Fahrenheit (40 degrees Celsius). Place the controller away from motors and relays/contactors that switch high current.

Do not install it in the same room where the animals live since the air tends to be corrosive to electronic circuits. A separate room or control office is a preferred location.

Use the mounting holes on the enclosures for mounting the modules. Before you drill holes into the enclosure, mark their locations and make sure that you do not drill into circuit boards and cables.



Unless absolutely necessary, do not remove the circuit boards. They are static-sensitive and should always be handled with appropriate grounding and electrostatic precautions.



Always remove power from the MicroZone modules and controlled devices before removing any MicroZone module covers or servicing any heating device.

Conduit and Connections

To avoid electrical shorts or damage due to moisture, you should never run conduit openings through the top of the box. Conduit and hubs should be corrosion-resistant plastic or fiberglass. Use only liquid-tight strain-relief connectors to bring wires into the box.

Trade Size (inches)	Hole Size (inches)
1/2	0.875
3/4	1.125
1	1.375
1 1/4	1.750
1 1/2	2.000
2	2.500
2 1/2	3.000
3	3.625

Conduit Hole Sizes.eps


Module Installation

For trouble-free operation, follow these simple installation guidelines:

- Electrical wiring used to connect the MicroZone modules **must meet all state and local regulatory requirements**. Wire rated for 600 volts (minimum) is recommended.
- Standard electrical conduit or raceways can be used to route wiring for the MicroZone modules.
- Do not install the modules in the same room where the animals live. A separate room or hallway is a preferred location.
- Do not install the modules where they will be subjected to harsh chemicals.
- When fastening the covers to the units, be sure to only compress gaskets to ½ their original size. This will result in a better seal to repel any moisture or dirt that may get into the units and prevent normal operation.

Wiring/Setup

Below is a simplified diagram to show how the MicroZone units interconnect for a 120V installation. A wiring diagram for 240V installation is on the next page. A qualified electrician can easily wire the system with standard (600V-rated) wire.

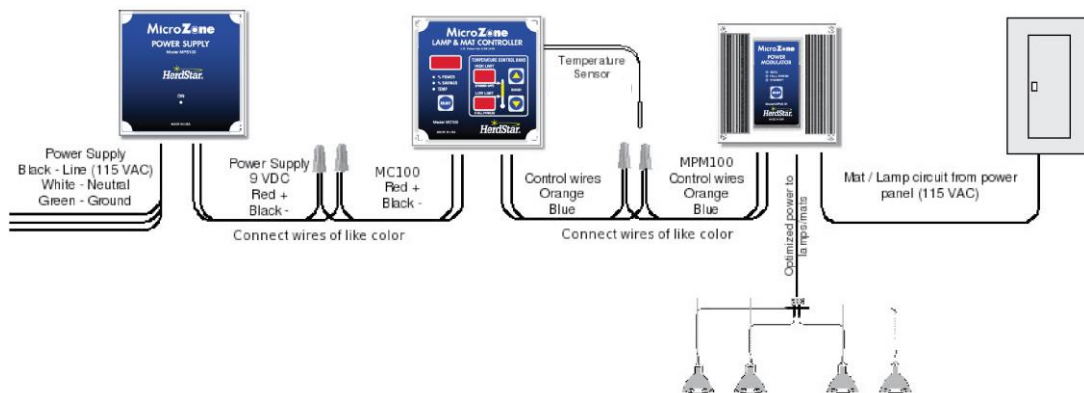

Note: When using two temperature sensors connected to the MC100, see the diagram below.


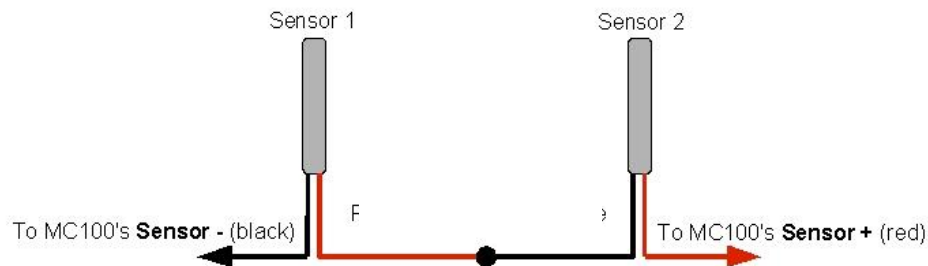


Diagram for connecting two temperature sensors to the MC100.

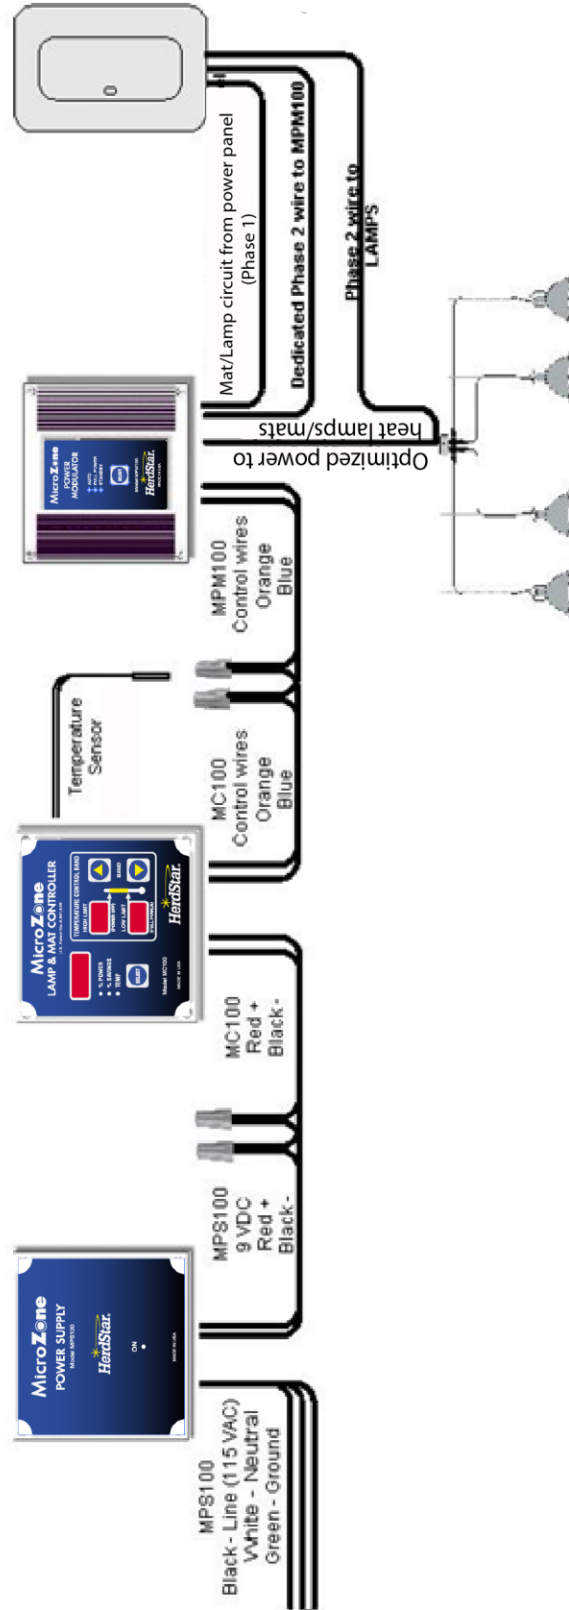

NOTE: To ensure proper operation of your MicroZone system, a dedicated Phase 2 wire must be run to the Modulators (MPM100's). This will prevent load current on the Phase 2 wire from interfering with proper operation of the MPM100 modulator.

(For 120V operation, Phase 1 is the 120V hot line and Phase 2 is the neutral line.)

Wiring Multiple MPM100 Power Modulators into a System

When wiring multiple MPM100 modules to a MC100 control unit, connect the orange and blue control wires together in parallel, as shown in the diagram below. You can connect up to twelve power modulators to a single MC100 control unit. Each power modulator will have its own heating device circuit wiring.



Wiring MPM100 Power Modulator



Ensure power is removed from the power distribution panel before wiring in the heating device feed circuit.

Ensure the power modulator (MPM100) and heating device supply circuits are properly grounded.



Always remove power from the MicroZone modules and controlled devices before removing any MicroZone module covers.



Note that line voltages are still present when STANDBY is selected on units wired for 240V operation.

Wiring Instructions

MPS100 Power Supply


- The power supply (MPS100) requires an input of 115 volts AC, 50/60 Hz. Using 14-16 gauge wires connect AC power to the BLACK (LINE), WHITE (NEUTRAL), and GREEN (GROUND) power supply wires.

MC100 Control Unit

- Matching wire colors, connect the power supply RED +9VDC and BLACK -9VDC wires to the MC100 control module's RED and BLACK 9-12 VDC input wires.
- Matching wire colors, connect the MC100 control module's ORANGE and BLUE control wires to the MPM100 power module's ORANGE and BLUE control wires. See the **Wiring Multiple MPM100 Power Modulators into a system** section above for more information.
- Connect the MC100's black and red sensor wires to the temperature sensor. If two temperature sensors ("sensor 1" and "sensor 2") will be connected to the MC100, the sensors should be wired in series (order does not matter):
 - a) Connect the MC100's **Temp -** (BLACK) wire to the **sensor 1** wire.
 - b) Connect the **sensor 1** wire to the **sensor 2** wire.
 - c) Connect the **sensor 2** wire to the MC100's **Temp +** (RED) wire.

MPM100 Power Modulator

- Connect the MPM100's (BLACK) wire to the power panel Phase 1.
- Connect the MPM100's (WHITE) wire to Phase 2 of the power panel with a dedicated wire.
- Connect a wire from Phase 2 of the power panel to Line 2 of the heating devices.
- Connect the MPM100's LOAD (RED) wire to the L1 line of the heating devices.

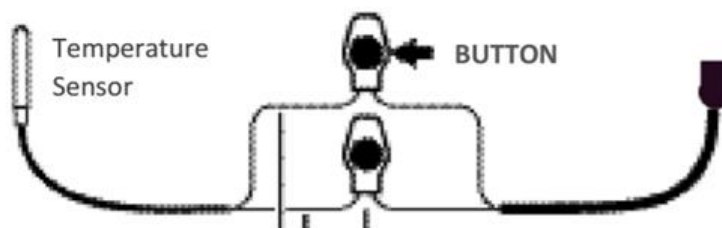

NOTE: To ensure proper operation of your MicroZone system, a dedicated wire must be run from the load center Phase 2 to the WHITE wire of the MPM100 modulators. This will prevent lamp load current on Phase 2 from interfering with proper operation of the MPM100 modulator. *(For 120V operation, Phase 1 is the 120V hot line and Phase 2 is the neutral line.)*

Specifications

Operating Environment: 0° F to 105°, 10 to 95% RH (indoor use only)

MPS100 MicroZone Power Supply

Input Voltage: 120VAC, 0.1A, 50/60Hz

Output Supply: 200mA max output at 9 VDC

Output Capacity: Maximum of 5 MicroZone Controllers within 200 feet using 18AWG, two-conductor wire.

MC100 MicroZone Controllers

Input Power: 9VDC

Temperature Specifications: +/- 2 degrees Fahrenheit at 30'

+/- 2.5 degrees Fahrenheit at 2000' using 22AWG two-conductor cable

+/- 2.5 degrees Fahrenheit at 5000' using 18AWG two-conductor cable

Communications Output Capacity: Maximum of 12 MPM MicroZone Power Modulators within 500 feet using 18AWG two-conductor wire.

Temperature sensing probe error: Less than 2° F (HerdStar supplied TS3 sensor)

MPM100 MicroZone Power Modulator

Input Power: 120/240VAC, 16A Maximum

Load Rating: 0-120VAC or 0-240VAC (2kW@120V or 4kw@240V Maximum)

Load Type: Resistive or Incandescent

Electrical protection: Short circuit, overload and voltage surge

Noise filter: FM radio filter

Enclosures: Weather tight (approximately 4" x 4" x 2")

IMPORTANT:

Do not exceed the listed Load Rating and Operating Environment limits, or attempt to use the MicroZone as an electronic speed control for electric motors.

Service

For assistance, make sure you have checked the parameters on the MicroZone. If you still need assistance, contact:



1400 Madison Ave, Suite 504 Mankato, MN 56001
PH: 507-344-8005 FAX: 507-344-8009
www.herdstar.com